



30.KIT.05

140 un

		
10.001.10 Lubrificador 06 x 100 25un	10.001.10 Lubrificador 08 x 100 25un	10.001.10 Lubrificador 10 x 100 15un
		
10.002.18 Lubrificador 1/8" GAS 15un	10.002.18 Lubrificador 45° 06 x 100 10un	10.002.18 Lubrificador 45° 08 x 100 10un
		
10.002.18 Lubrificador 45° 10 x 100 15un	10.002.18 Lubrificador 45° 1/8" GAS 5un	10.002.18 Lubrificador 90° 06 x 100 10un
		
10.002.18 Lubrificador 90° 08 x 100 10un	10.002.18 Lubrificador 90° 10 x 100 5un	10.002.18 Lubrificador 90° 1/8" GAS 5un